



Electric seat and mirror adjustment with memory function

from 2002 m. y.

4-Pin Relay Carrier with threaded connection

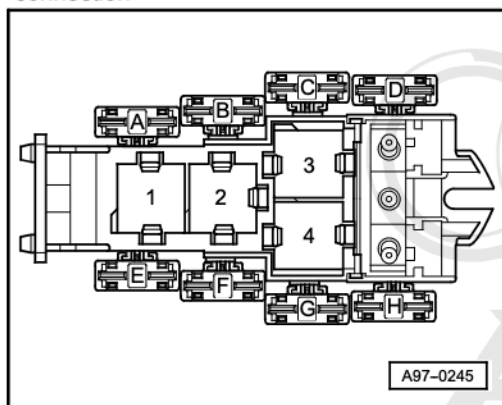


9-Pin Relay Carrier in the instrument panel

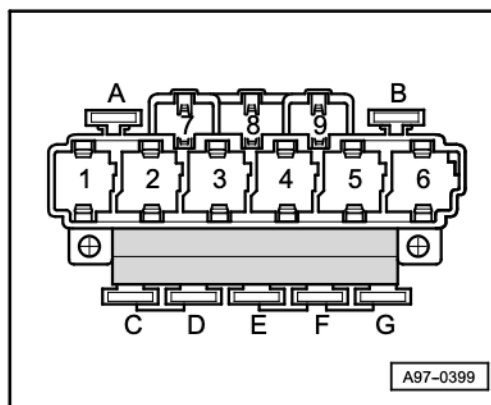

Fuse Location:

E - Power Seat Fuse (S45)

Fuse holder

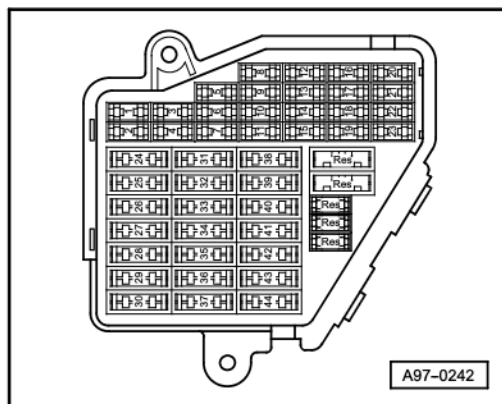

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse Colors

30 A - Green
 25 A - White
 20 A - Yellow
 15 A - Blue
 10 A - Red
 7,5A - Orange
 5A - Beige


Fuse in fusebox from 23 onwards are numbered 223 onwards in Current Flow Diagram.

Driver's Seat Lumbar Support Adjustment

- J136 Memory Seat/Steering Column Adjustment Control Module
- N199 Igniter for side airbag, driver's side
- S45 Driver's Power Seat Adjustment Circuit Breaker 2
- T10o 10-Pin Connector, red, seat wiring connector station, driver seat
- T12g 12-Pin Connector, black, Memory power Seat Control module
- T16 16-Pin Connector, black, diagnostic connection
- T32e 32-Pin Connector, Memory power Seat Control module

- 95 Ground Connection 1, in power seat wiring harness
- 277 Ground Connection 3, in wiring harness interior
- 501 Threaded Connection 2 (30) on the relay plate
- A98 Plus Connection 4 (30), in instrument panel wiring harness
- A159 Connection (L) (in instrument panel wiring harness)
- M1 Plus Connection 1 (30), in power seats wiring harness

* ⇒ Current wiring diagram for airbag

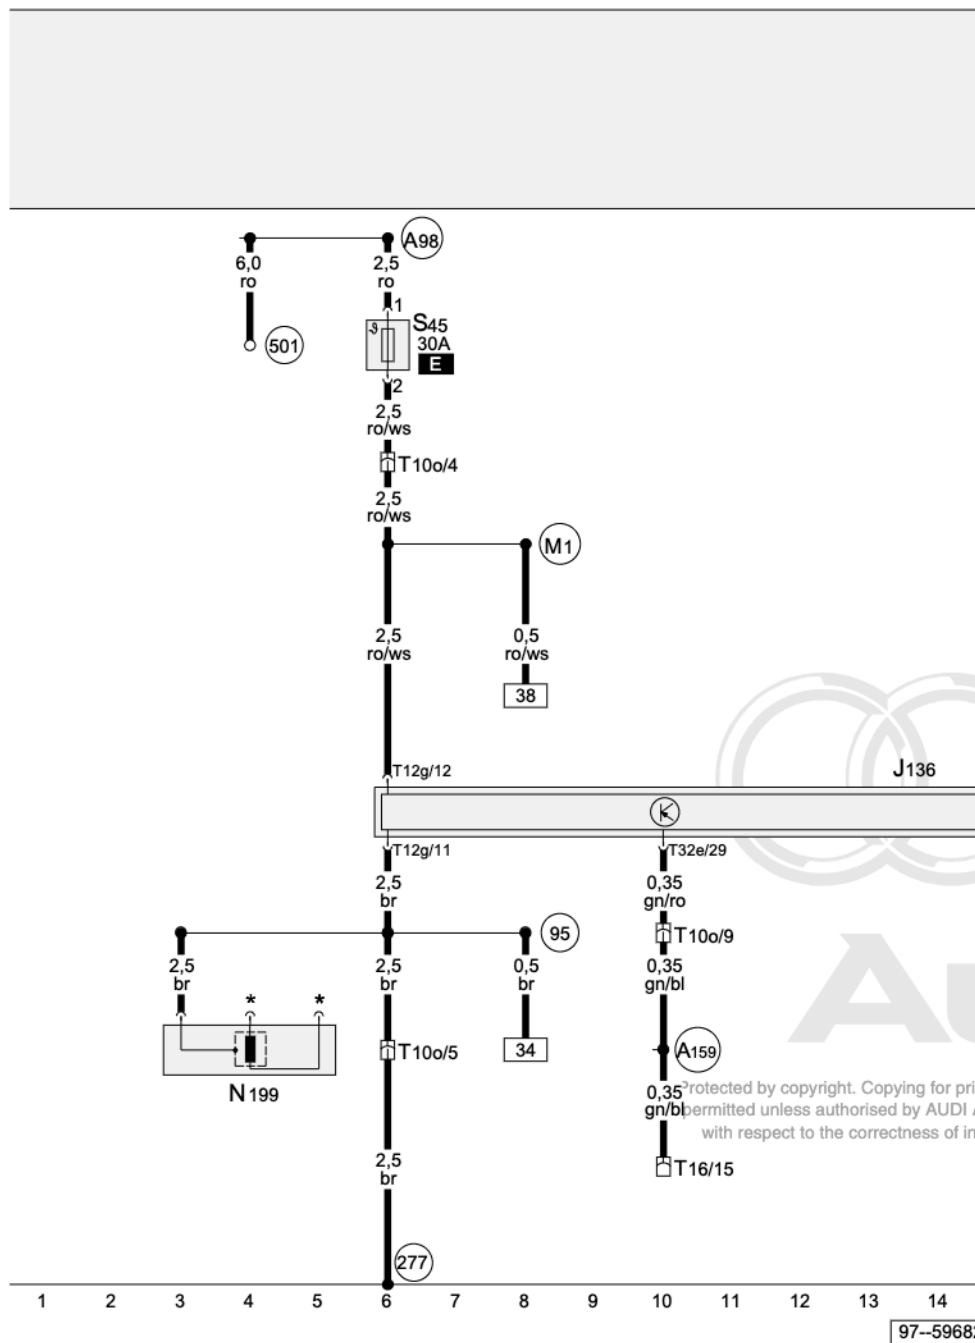


97--59682

Power Seat driver seat

- E96 Driver's Backrest Adjustment Switch
- E222 Switch for slope adjustment, driver seat
- E363 Driver's Seat Fore/Aft Switch
- E364 Driver's Seat Height Adjustment Switch
- G227 Sensor for fore and aft adjustment, driver seat
- G231 Sensor for height adjustment, driver seat
- G232 Sensor for slope adjustment, driver seat
- J136 Memory Seat Control Module
- T12g 12-Pin Connector, Memory power Seat Control module
- T32e 32-Pin Connector, Memory power Seat Control module
- V28 Driver's Seat Fore/Aft Switch
- V243 Driver's Seat Inclination Adjustment Motor
- V245 Driver's Seat Height Adjustment Motor


M9 Plus connection -1-, in power seats wiring harness

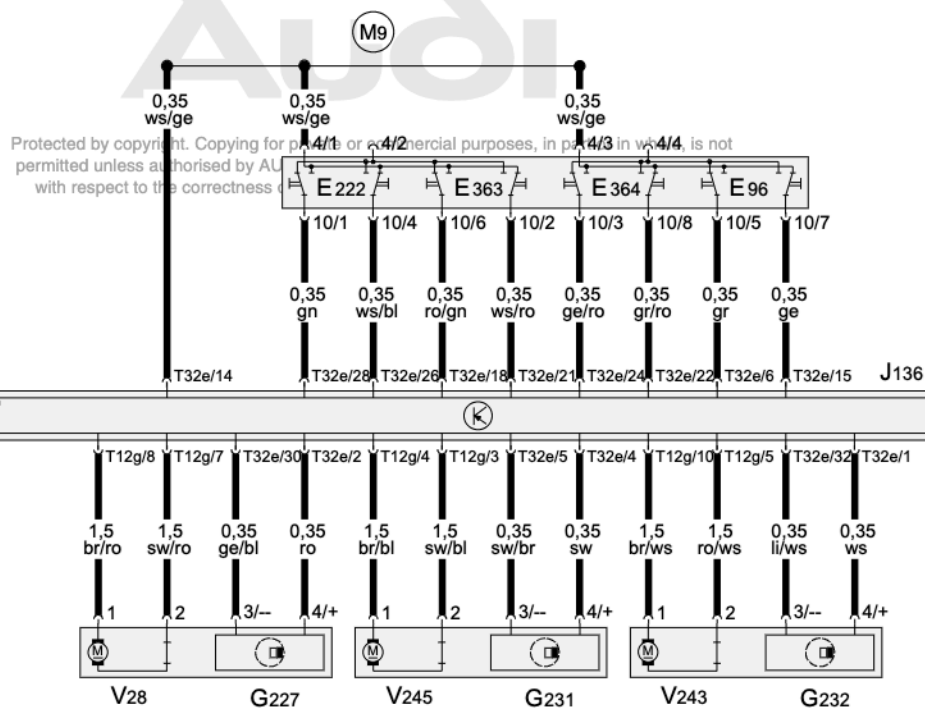

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink

15 16 17 18 19 20 21 22 23 24 25 26 27 28

97-55511

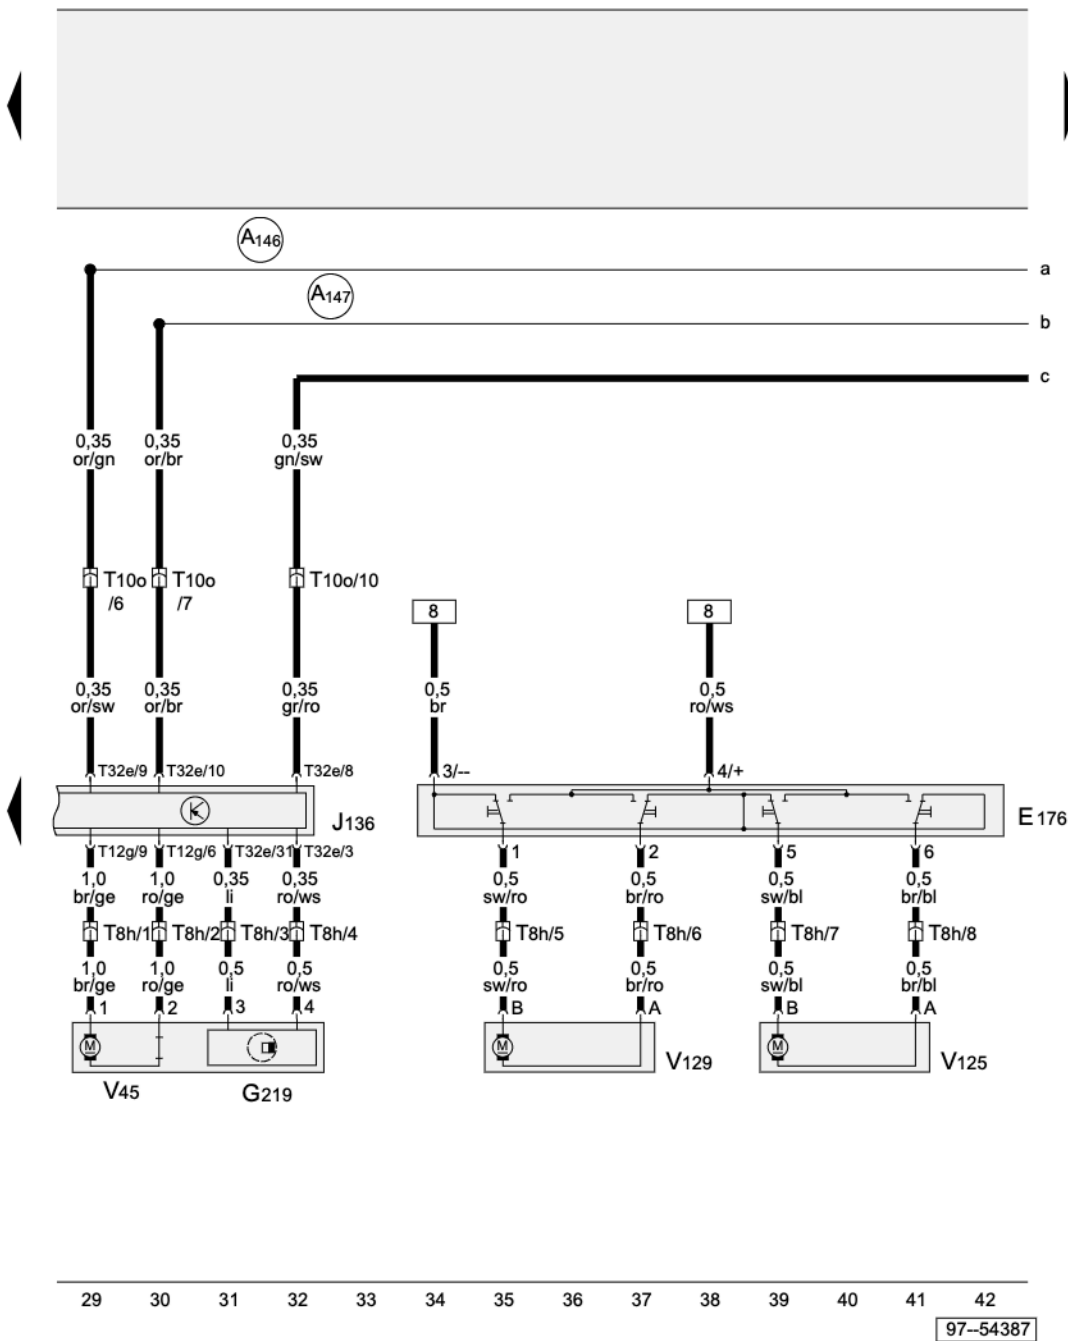

Backrest and lumbar support adjustment, driver seat

- E176 Driver's seat lumbar support adjustment switch
- G219 Sensor for seatback adjustment, driver seat
- J136 Memory Seat Control Module
- T8h 8-Pin Connector, on driver seat, seat backrest
- T10o 10-Pin Connector, red, seat wiring connector station, driver seat
- T12g 12-Pin Connector, Memory power Seat Control module
- T32e 32-Pin Connector, Memory power Seat Control module
- V45 Motor for seatback adjustment, driver seat
- V125 Driver's seat lumbar support curvature adjustment motor
- V129 Driver's seat lumbar support height adjustment motor


- A146 Comfort System High-bus Connection (in instrument panel wiring harness)
- A147 Comfort System Low-bus Connection (in instrument panel wiring harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Outside Mirror, driver's Side



- E43 Mirror Adjustment Switch
- E48 Mirror Selector Switch
- E168 Switch for Mirror Adjustment with Fold-Away Function
- J386 Door control module, driver side
- T10e 10-Pin Connector, black, on door control module, driver's door
- T16b 16-Pin Connector, on door control module, driver's door
- T20 20-Pin Connector, black, door A-pillar, left
- T32c 32-Pin Connector, grey, door control module, driver's door
- V17 Driver's Side Mirror Adjustment Motor
- V121 Motor for fold-in mirror, driver side
- V149 Motor for mirror adjustment, driver side
- Z4 Heated outside mirror, driver side

- 205 Ground connection, in driver's door wiring harness
- A146 Comfort System High-bus Connection (in instrument panel wiring harness)
- A147 Comfort System Low-bus Connection (in instrument panel wiring harness)
- R52 Connection (58s) (in left front door wiring harness)
- * only for models with Garage Door Opener - 'Homelink'

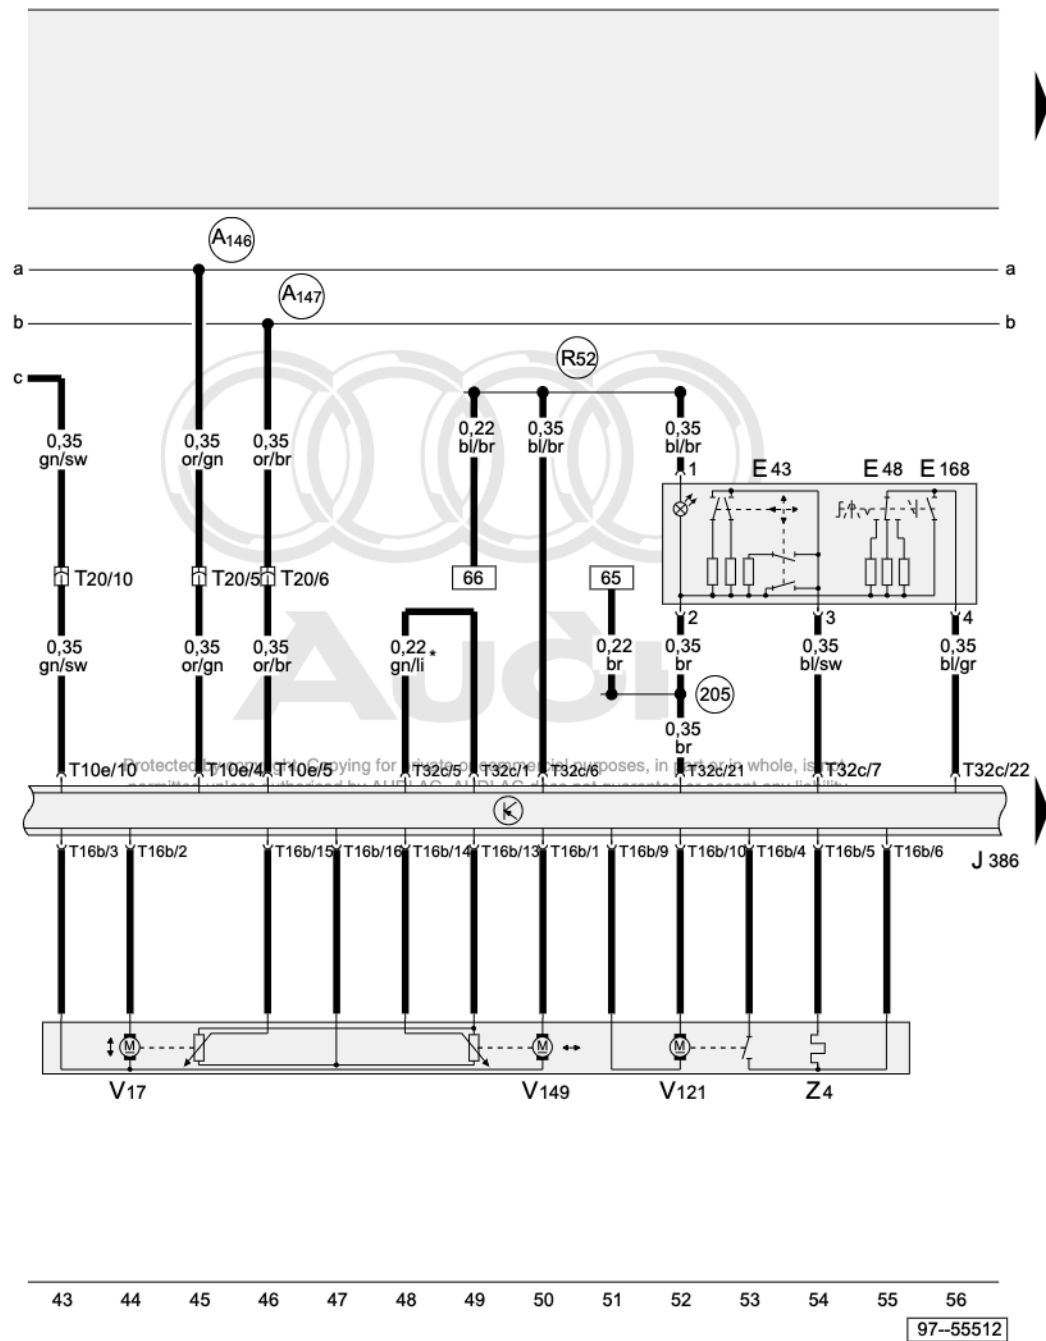

Driver's Seat Memory Program Control

- E97 Driver's Seat Memory Program Control
- J386 Door control module, driver side
- T32c 32-Pin Connector, grey, door control module, driver's door
- A146 Comfort System High-bus Connection (in instrument panel wiring harness)
- A147 Comfort System Low-bus Connection (in instrument panel wiring harness)

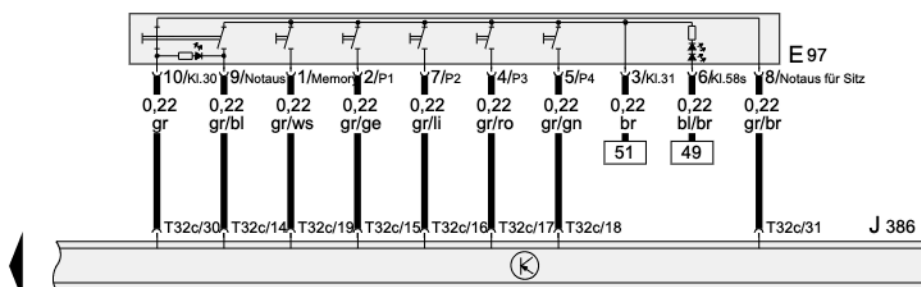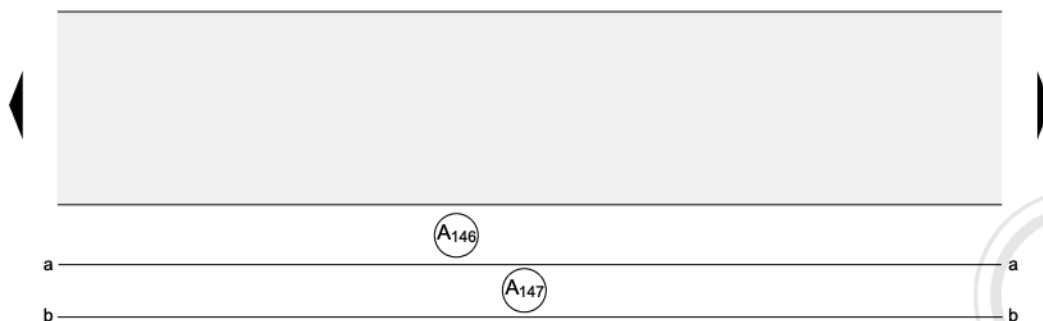

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink